

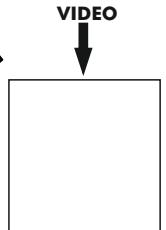
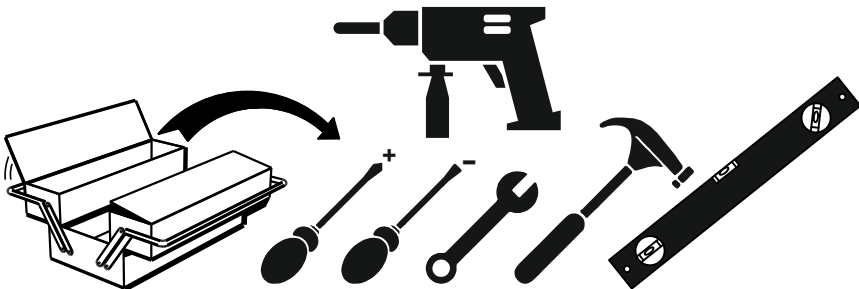
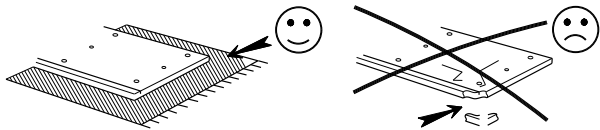


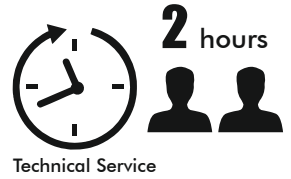

MULTIMO








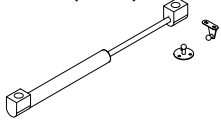



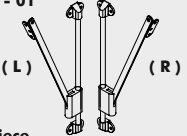




A 502-1 ROYAL BOOKCASE 100


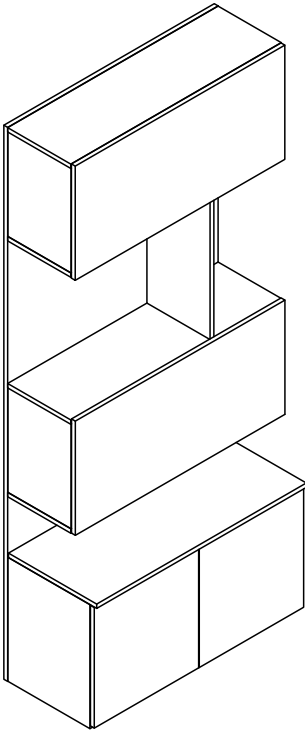


link






Track Title	Piece	(inch)			(mm)			
		Thickness	Length	Width	Piece	Thick	Height	Most
A	1	0,71	89,76	39,37	1	18 mm	2280	1000
B	1	0,71	39,37	11,81	1	18 mm	1000	300
C	1	0,71	39,37	11,81	1	18 mm	1000	300
D	1	0,71	39,37	11,81	1	18 mm	1000	300
E	1	0,71	39,37	11,81	1	18 mm	1000	300
F	1	0,71	23,11	11,81	1	18 mm	587	300
G-R / G-L	2	0,71	16,93	11,81	2	18 mm	430	300
H-R / H-L	2	0,71	16,93	11,81	2	18 mm	430	300
K	1	0,71	20,08	11,81	1	18 mm	510	300
L	1	0,71	20,08	11,81	1	18 mm	510	300
M	1	0,71	37,87	14,65	1	18 mm	962	372
N	1	0,71	20,08	37,87	1	18 mm	510	962
P	1	0,71	37,87	14,57	1	18 mm	962	370
R	1	0,71	39,06	16,50	1	18 mm	992	419
S	2	0,71	19,53	19,53	2	18 mm	496	496
T	1	0,71	18,50	39,21	1	18 mm	470	996
U	1	0,71	18,50	39,21	1	18 mm	470	996

Accessories List


MXN 02  24 / piece	MNG - 01  24 / piece	KVL 01  39 / piece	TAP - 01  24 / piece
TS - 01  4 / piece	TS - 01 (spring hinges)  4 / piece	VD - 03 (3,5x18) mm  65 / piece	AMR - 01 (120N)  3 / piece
BS - 01  2 / piece	DKM - 01  2 / piece	VD - 07 (3x16) mm  12 / piece	DKM - 01  1 / piece
CT - 02 (6x30) mm  2 / piece	PM - 01  4 / piece	VDA - 01 (6,5x50) mm  16 / piece	VTB - 01 (4,8x16) mm  8 / piece

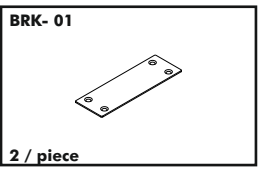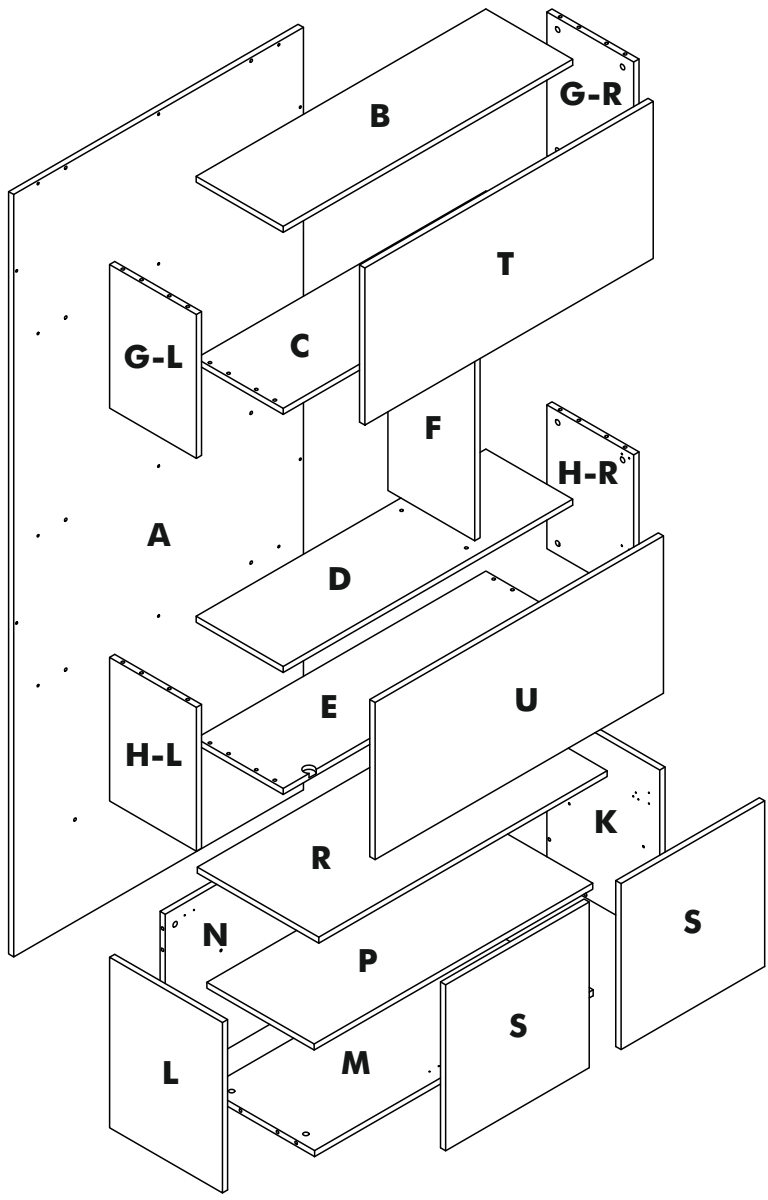

STEP 1


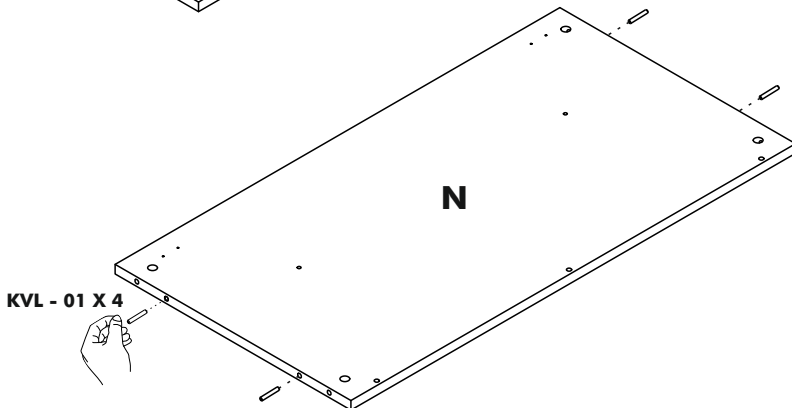
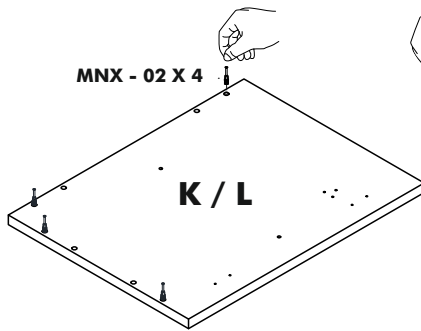
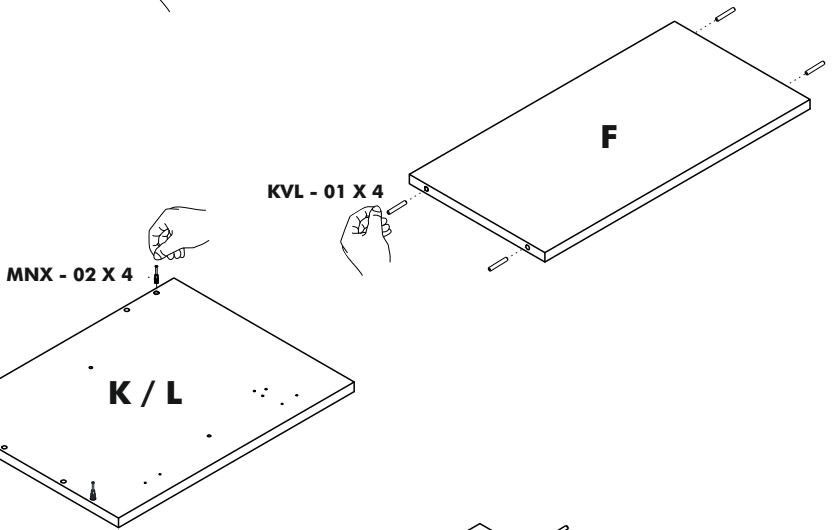
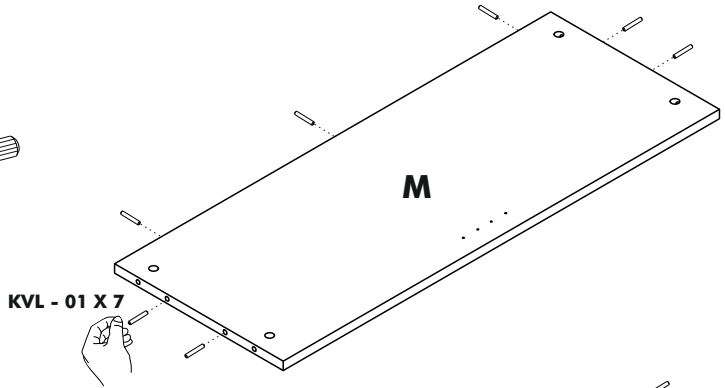
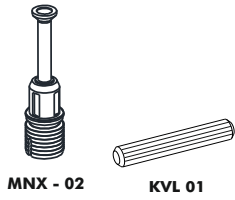


VIDEO




link

STEP 2

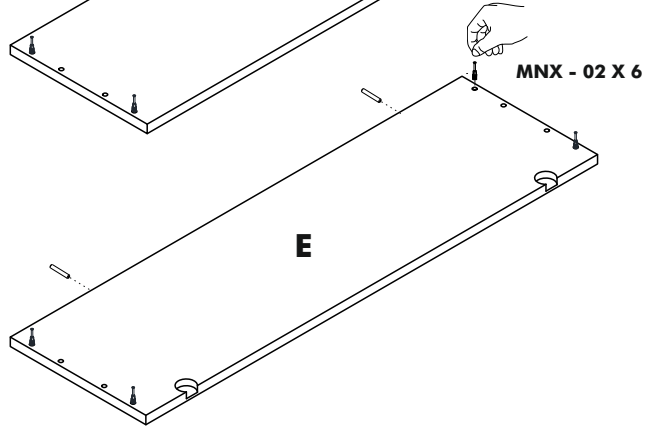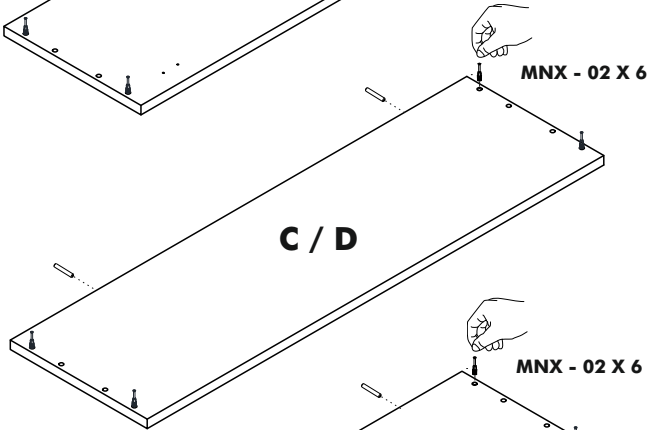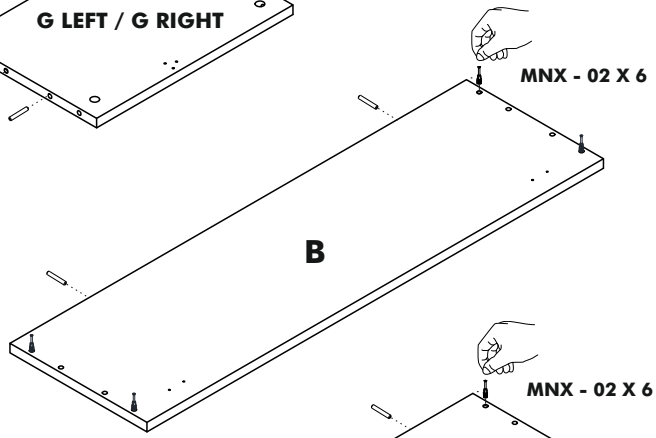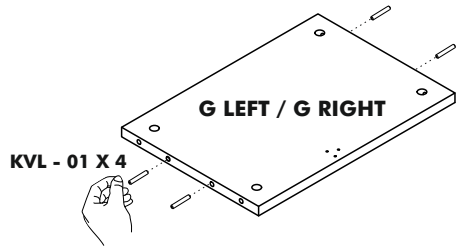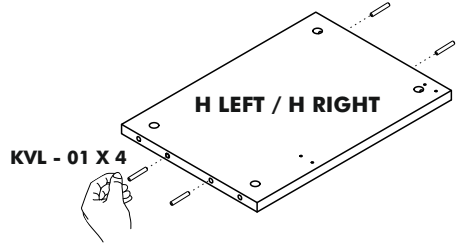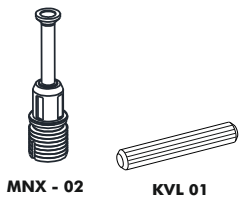


VIDEO


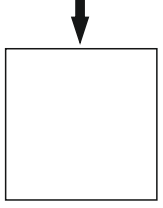


link


STEP 3

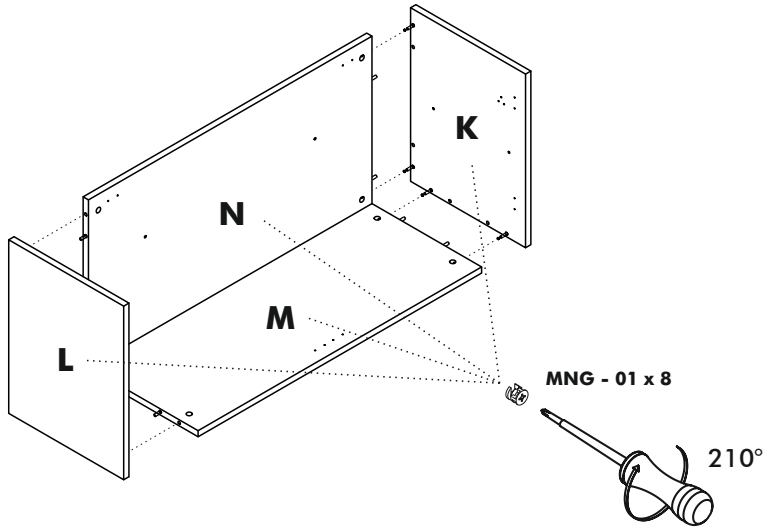

STEP 4

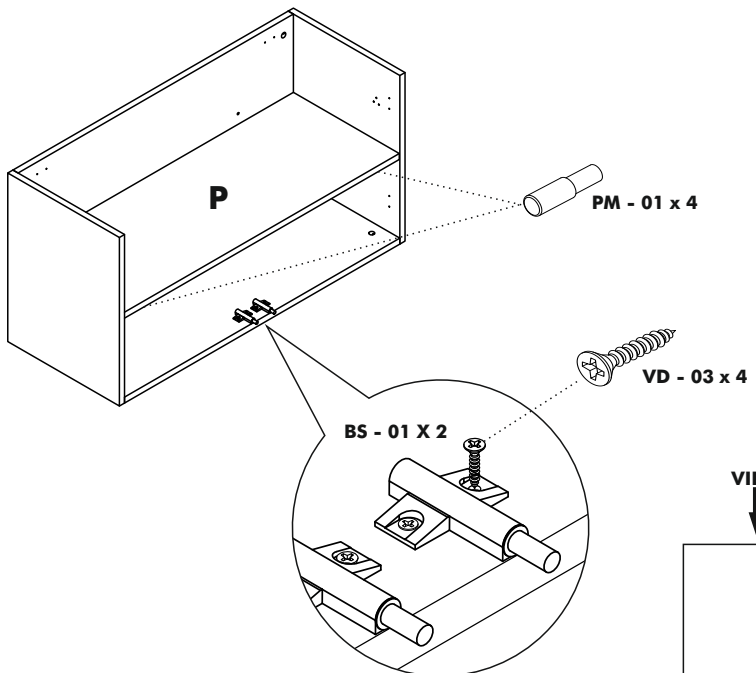



VIDEO






link





STEP 5

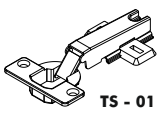


VD - 03 X 4

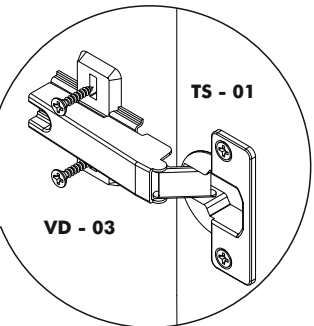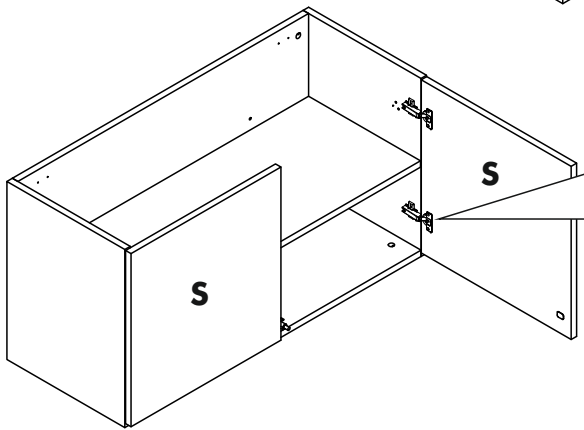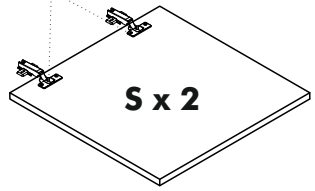

Before sticking , make sure that the surface is not dusty.

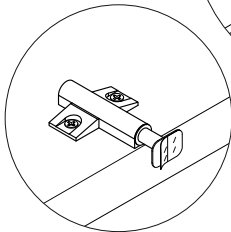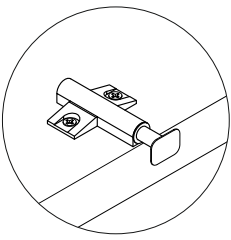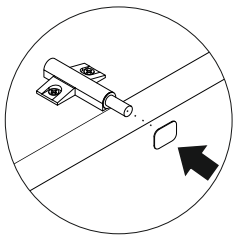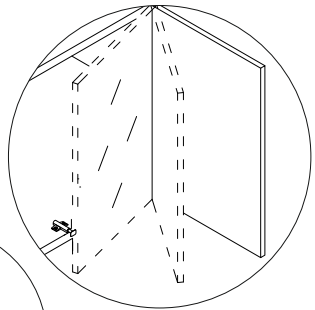


VIDEO


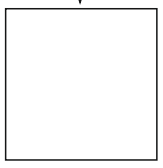


link


STEP 6





TS - 01 (spring hinges)

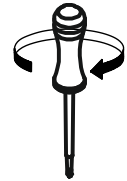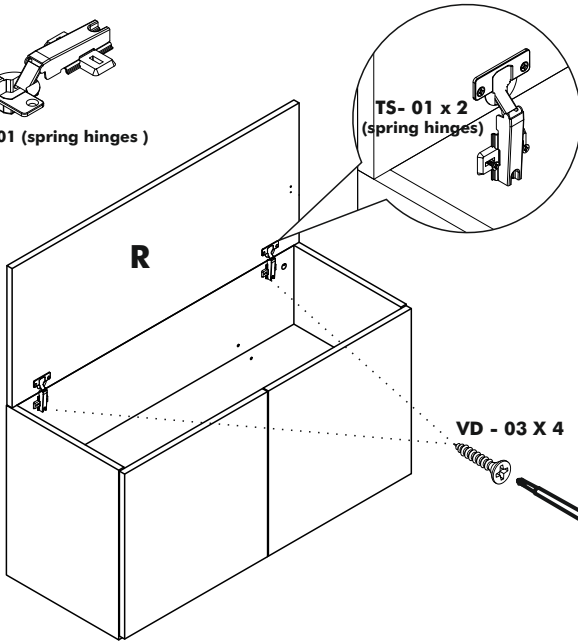


VD - 03 X 4

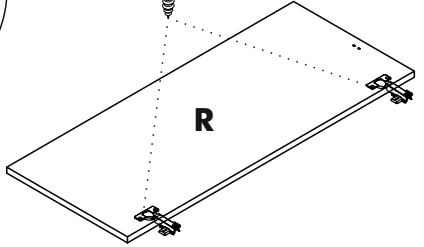

STEP 7

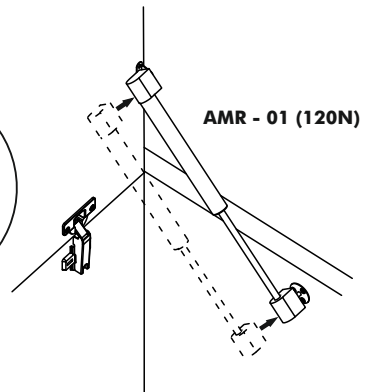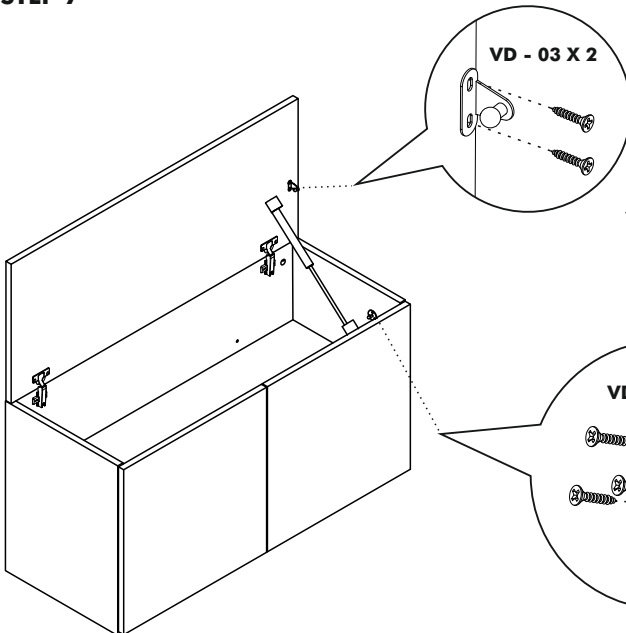


VIDEO




link

STEP 8

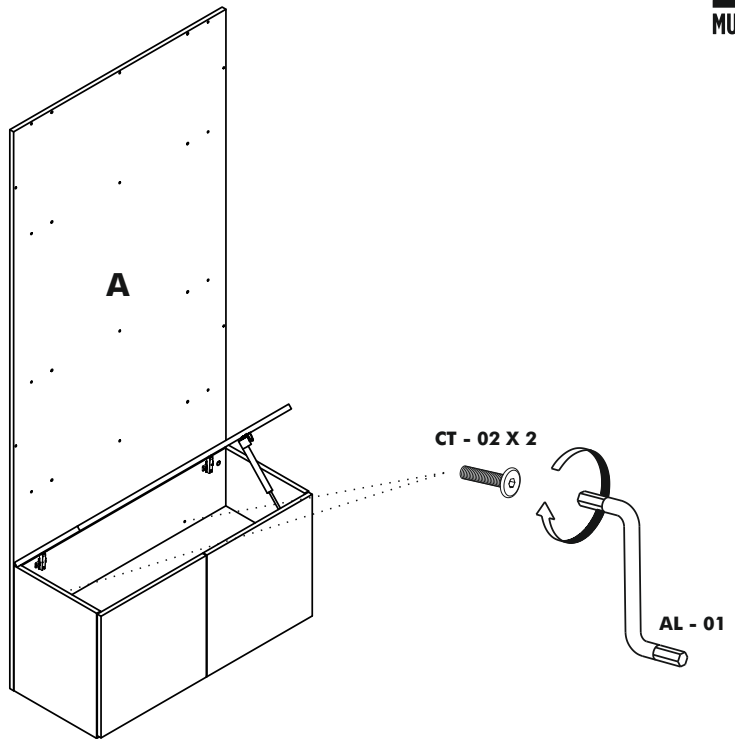


STEP 9

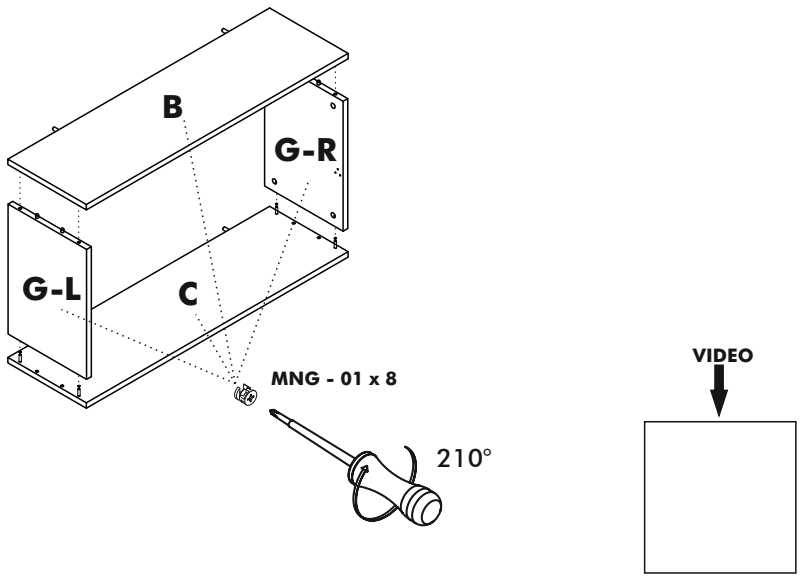



STEP 10



MNG - 01

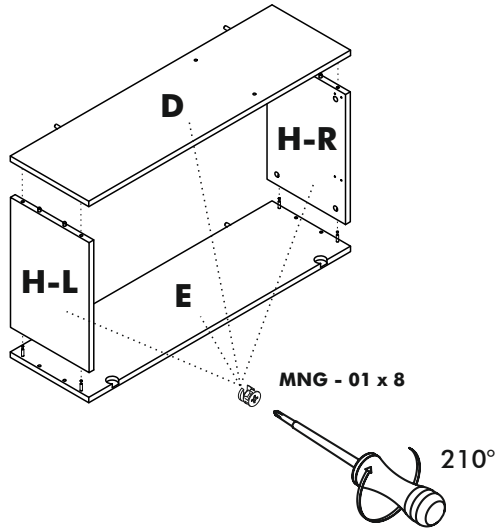


STEP 11

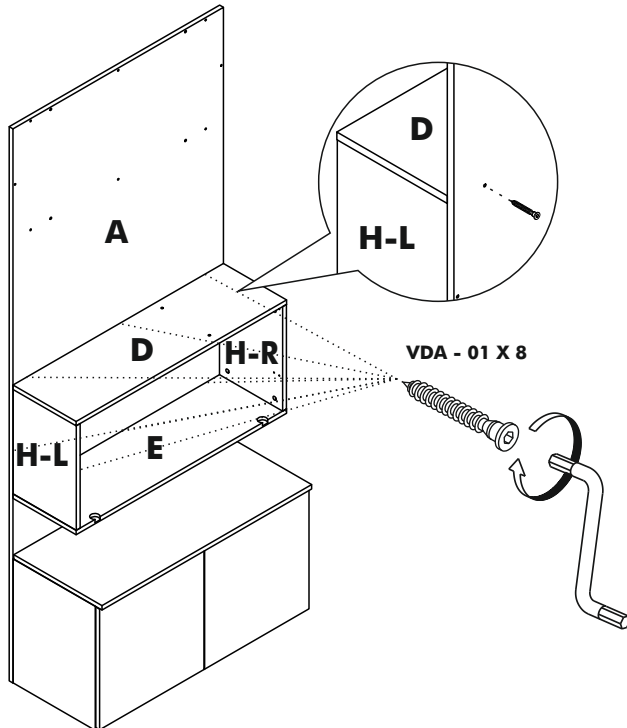


link


STEP 12

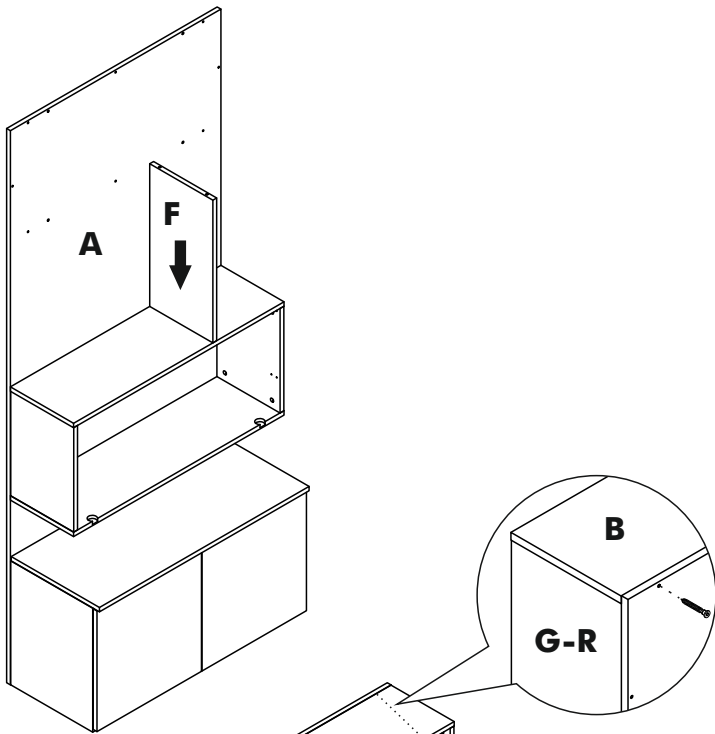


STEP 13

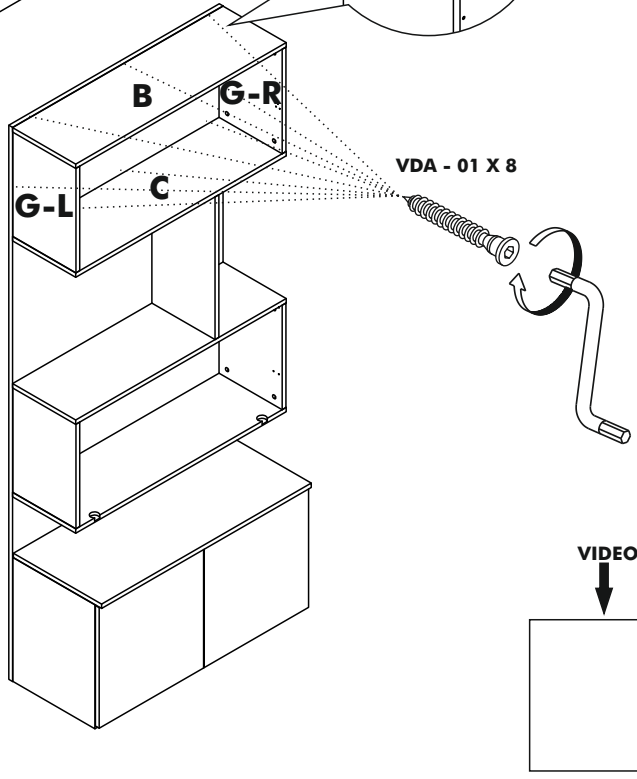

STEP 14








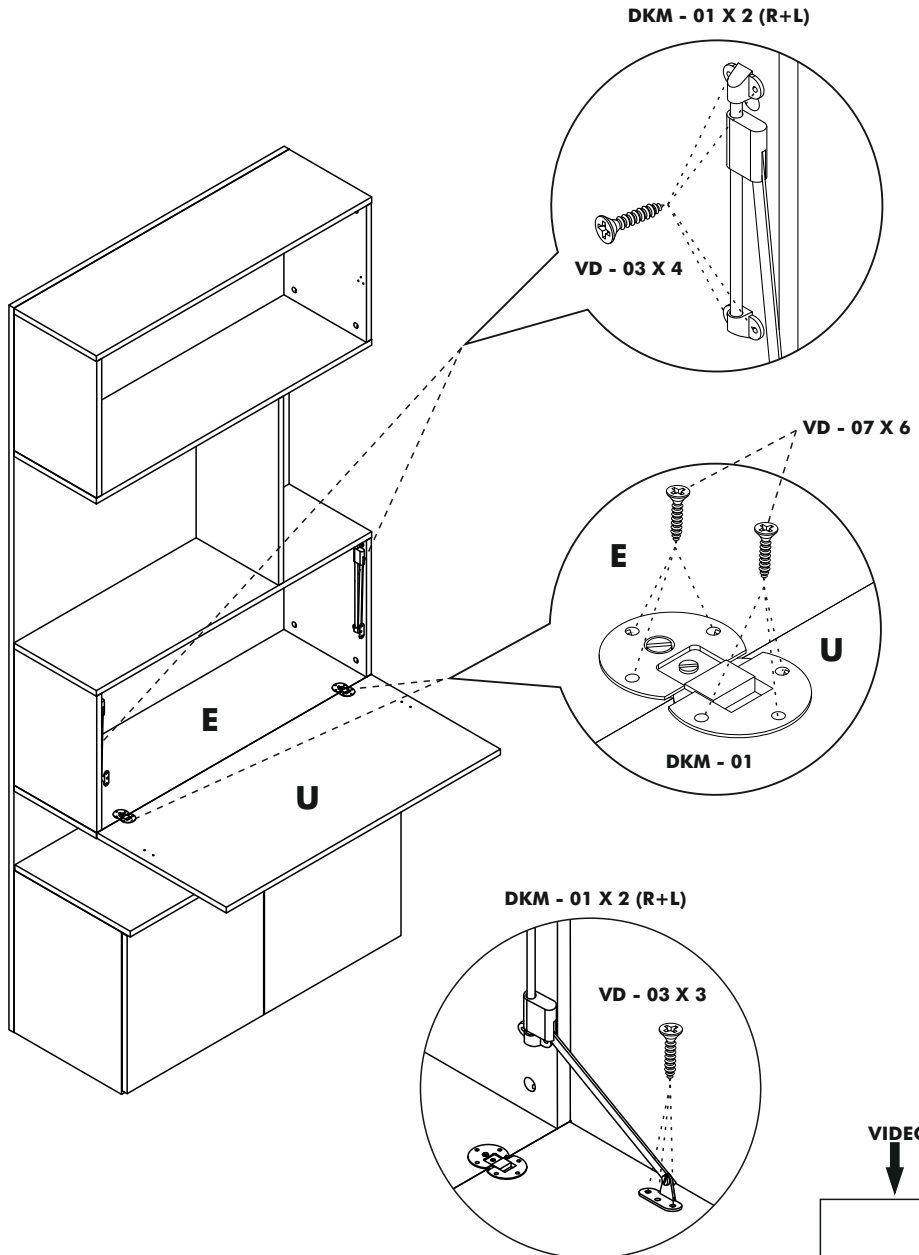


VIDEO
↓




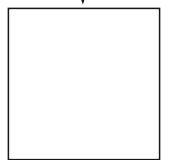


link

STEP 15

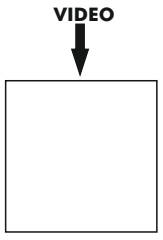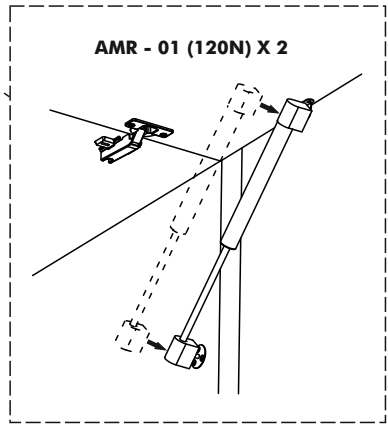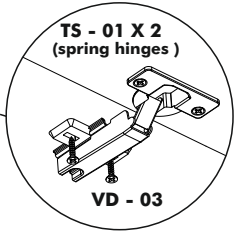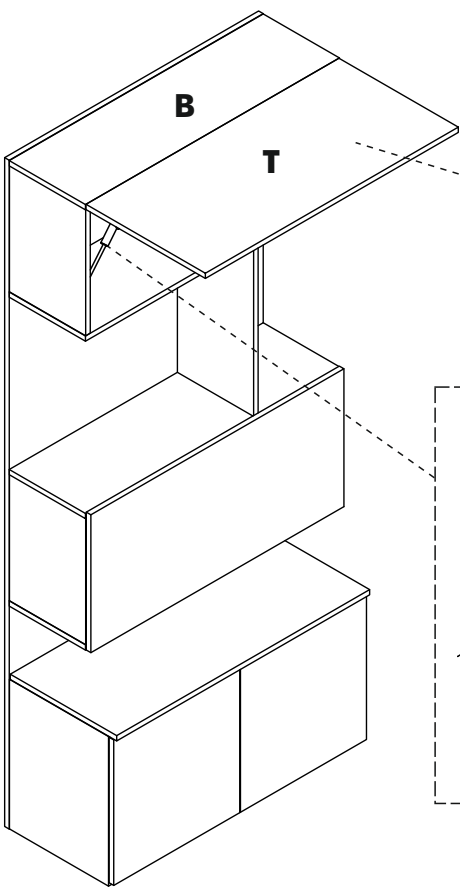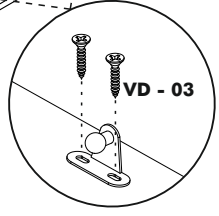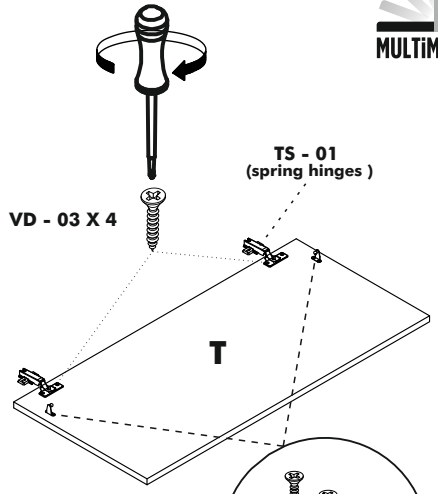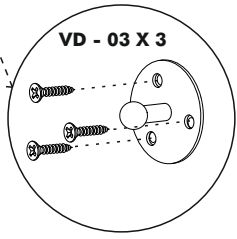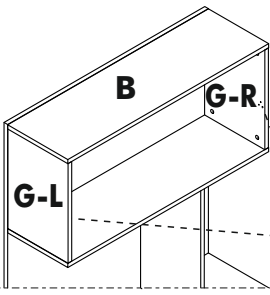

STEP 16

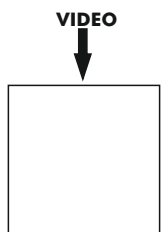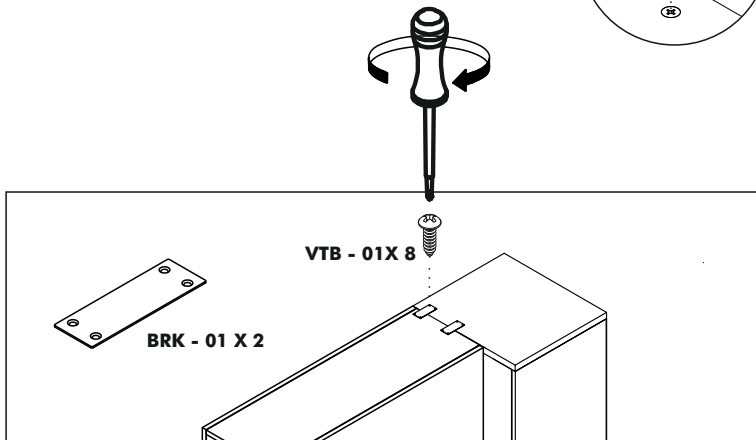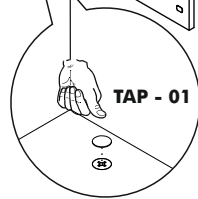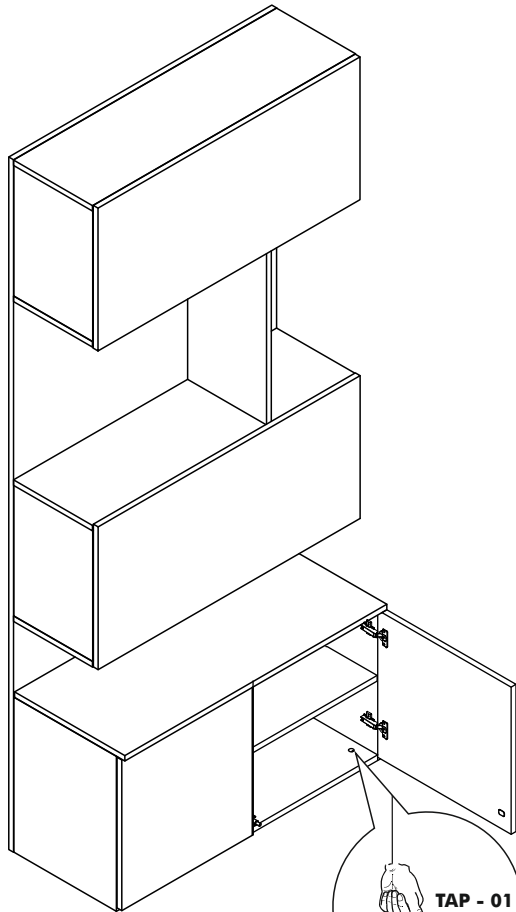

ATTENTION / HOW TO / READ ME / OWNER'S GUIDE

1. Cabinets must be securely attached either to the wall and / or side of the wall bed. Hardware is included
2. When mounting to drywall, use appropriate fasteners, such as toggle bolts or attach to wooden or metal studs. Please choose appropriate fasteners for the type of wall and / or studs the cabinet will be mounted on. Drywall mounting fasteners are not included.
3. For safety and product longevity you must periodically inspect the integrity and tightness of the mounting and mechanical connections. Confirm hardware remains properly affixed and connections are snug.
4. Do not lean or rest heavy objects on sides or top of furniture. This may cause balance issues and compromise the integrity of your mounting connections.
5. Please use cabinet shelves and clothes rails as intended. Do not place extremely heavy items on shelves and / or drawers. Improper use may cause personal injury and damage to property.
6. With seasonal humidity change please inspect the interior and exterior of the furniture for deformation and/or discoloration.
7. Before any un-mounting or disassembly please contact Multimo Beds for technical support and instructions. Failure to properly detach may result in personal injury and damage to property.



WARRANTY

RETAIL RESIDENTIAL TERM

Lifetime guarantee on hardware.
5 year structural guarantee on cabinetry.

COMMERCIAL TERM

Lifetime guarantee on hardware.
2 year structural guarantee on cabinetry.



www.multimobeds.com